




Optimal speaker cable terminations for all audio applications

High contact pressure & ultra low-loss signal transfer

Gold Plated Crimp-on Banana Plugs

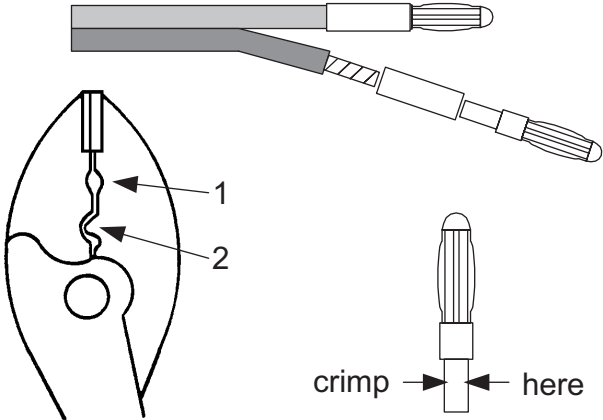

1. Separate the conductors & strip 3/8" of insulation off each
2. Slide the Red (+) & the Black (-) rubber covers over the respective conductors
3. Insert the 3/8" of stripped strands into the banana plug
4. Crimp the banana **first with position 1** as indicated and **second with position 2**

OEM Systems Company, Inc.
 740 Freeport Blvd., #106 Sparks, Nevada 89431-6168
 (775) 355-0405 (775) 355-0646 fax
 www.oemsystems.com info@oemsystems.com