

The following provides you, the installer or owner, with basic information on the installation of the MP-8. If you have any further questions not answered by this manual, please contact your local dealer.

GENERAL DESCRIPTION

The MP-8 Media panel installs like our in-wall loudspeaker utilizing our 6-1/2" speaker frame and clamp ring.

Your MP-8 includes the following:

- #6 x 1/4" screws (qty: 16)
- #8 x 2" screws (qty: 4)
- Rubber spacers (qty: 4)
- label sheets (qty: 3)
- MP-8 assembly: unpopulated media panel, 4 label holders, frame, clamp ring & 4 attachment screws

Upon arrival, inspect your MP-8 to ensure there is no damage. If there is, please notify your dealer or supplier. If you received your MP-8 by public transportation, report the damage at once to the shipping company.

MP-8 PLACEMENT

Placement of the MP-8 is fairly straight forward. In most cases it will be dictated by wire accessibility, convenience, system design, or necessity. The most important things to consider are: Can you get wires to the location and with what difficulty? Where are the stud locations? (Use an electronic stud finder). Is there anything inside the wall that would impair the installation of the MP-8 or any accessory devices in it?


It is good practice to look on the back of the wall where you plan to locate the MP-8 and see if there is anything like an electrical box, medicine cabinet, plumbing, etc. that might interfere with its installation. Also check upstairs or downstairs in multilevel dwellings for fixtures that have plumbing running up or down in the walls. Pay attention to vent or drain pipes. When you know the installation location and have done your best to ensure that it is free of obstructions it is time to install your MP-8.

INSTALLATION

Mark the cut-out location for the MP-8 using the following dimensions:

Cut-out Dimensions	
Width	8"
Height	11 3/4"
Depth	varies with installed devices

Cut the hole. On drywall, cuts are best made with a manual drywall saw.

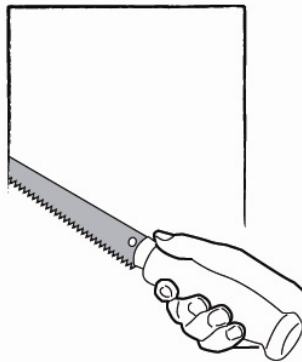

Disassemble the MP-8 by removing the four stainless steel screws.

As the diagrams show, the MP-8 frame utilizes a metal clamp ring which, after tightening with the screws provided, acts to clamp the frame in place.

Figure 1: Install the clamp ring to the frame by passing the four black #8 screws through the holes in the frame and screwing them into the corresponding holes on the clamp ring.

Figure 2: Insert assembly into the cut-out by passing the black clamp ring through the hole as illustrated.

Figure 3: Tighten the screws, being careful not to over tighten as it may cause distortion of the frame.

Figure 4: Install the four rubber spacers in corners on the back side of the Media Panel.

At this time populate your Media Panel. Slide the label holders out of the media panel to expose the screw attachment holes. We have provided the 16 white

screws to attach your accessories. Slide the label holders back in place. Insert the desired labels by sliding them into place.

Figure 5: Pull the wires through the frame's opening and attach them to the backside of your devices in the Media Panel. Attach the Media Panel to the frame using the four stainless steel screws.

